



model SP65SS

AXION® MSR Eye/face Wash Head

FEATURES & BENEFITS

OPTIONS

For more information, visit www.hawesco.com or call (888) 640-4297.



SPECIFICATIONS

Model SP65SS AXION® MSR Type 304 Stainless Steel eye/face wash head shall include inverted directional flow with laminar flow and an integral 3.7 gpm (14 L) flow control, along with a yellow plastic pop-off dust cover. (Not for use with freeze protected models)

APPLICATIONS

Intended as a direct replacement for the SP63 and SP63FC Haws eyewash assembly. Suitable as a replacement for current SP62, SP62FC, SP69, and SP69FC eyewash assemblies.




INSTALLATION/ RETRO FIT STEPS

1. IF REPLACING AN EXISTING EYEWASH ASSEMBLY WITH SP65SS FOLLOW STEPS 2 THROUGH 5
AND IF INSTALLING SP65SS ON NEW UNIT FOLLOW STEPS 3 THROUGH 5 (IF APPLICABLE).

**NOTE: NOT FOR USE ON ANY FREEZE RESISTANT UNIT; i.e. 8300FP,
8300.158, 7433FP, 8317CTFP, 220V, AND 8317CTFPC1D1.**

2. REMOVE EXISTING EYEWASH BY SPINNING EYEWASH TEE COUNTERCLOCKWISE.
DO NOT REMOVE BRASS NIPPLE FROM BOWL HOLDER.
3. PLACE SP65SS ADAPTER THROUGH DUST COVER LOOP. THREAD SP65SS ADAPTER ONTO
NIPPLE UNTIL SNUG AGAINST STRAINER.
4. THREAD SP65SS ONTO ADAPTER. ORIENT TAB TOWARDS THE BACK (AWAY FROM USER).
DO NOT OVER-TIGHTEN.
5. PLACE DUST COVER ONTO EYE/FACE WASH IF MODEL 9102 STAINLESS COVER IS NOT INSTALLED.
6. EXISTING COMPONENTS SHOWN (TYPICAL MODEL) ARE FOR REFERENCE ONLY AND MAY NOT
REPRESENT YOUR SPECIFIC UNIT.
7. ADAPTER SUPPLIED WITH SP65SS MAY NOT BE REQUIRED IN SOME APPLICATIONS.

EYE/FACE WASH HEAD SHOWN WITHOUT DUST COVER

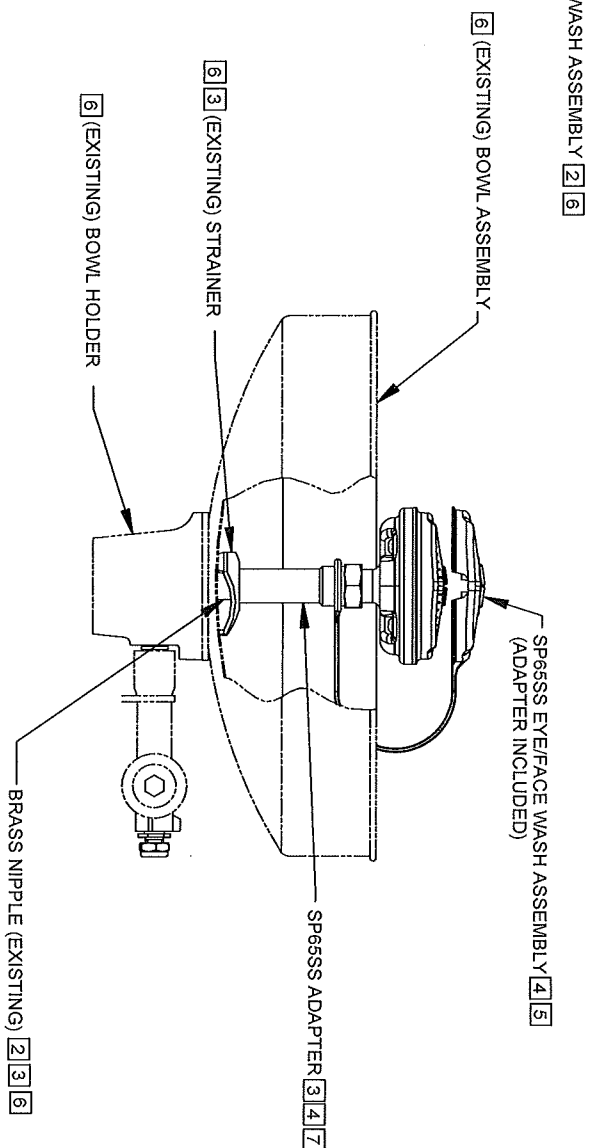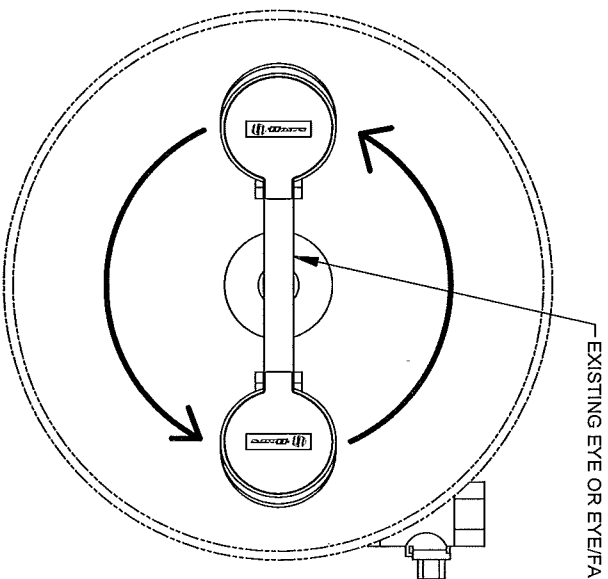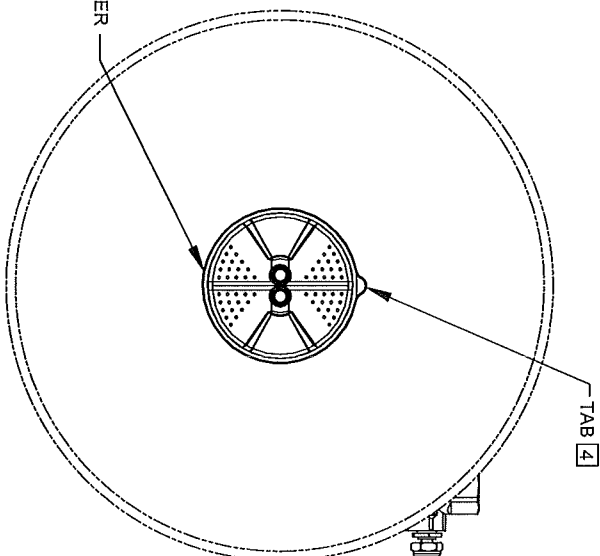

SEE SHEET 2 OF 2
FOR FLOW CONTROL
CLEANING STEPS



1455 KLEPPE LANE

SPARKS, NEVADA 89431

(775) 369-4712 FAX (775) 369-7424


E-MAIL: HAWS@HAWS.CO.COM

WEBSITE: WWW.HAWS.CO.COM

ECN NO. 4356	REVISED PER BY: CHD	MODEL(S)	SP65SS	PART NUMBER	0002077593
DRAWN: IR	DATE: 2/10/06	SCALE: 11/8	DRAWING TYPE: INSTALLATION	DRAWING NO. 15972A00	REV 3
APPROVED: [Signature]	DATE: 2/10/06	SCALE: 11/8	DRAWING TYPE: INSTALLATION	SIZE: A	SHEET 1 OF 2


FLOW CONTROL CLEANING STEPS:

- 1 UNSCREW EYE/FACE WASH ASSEMBLY FROM ADAPTER.
- 2 REMOVE SCREWS (QTY. 4) FROM SP65SS EYE/FACE WASH ASSEMBLY. REMOVE EYE/FACE WASH HEAD AND BUFFER (INSERT).
- 3 REMOVE EXISTING FLOW CONTROL FROM BASE BY PUSHING IT OUT FROM THE TOP, AND CAREFULLY REMOVE ANY DEBRIS LODGED BETWEEN O-RING AND HOUSING OR OPENINGS. ALSO, CHECK FOR ANY SEDIMENT OR MINERAL DEPOSITS BLOCKING OPENINGS. EXERCISE CAUTION NOT TO DAMAGE OR LOSE O-RING IN THE PROCESS. ALL OPENINGS ON FLOW CONTROL MUST BE FREE AND CLEAR OF ANY OBSTRUCTIONS FOR FLOW CONTROL TO FUNCTION PROPERLY. REINSTALL FLOW CONTROL. SEE DETAIL A FOR ORIENTATION.
- 4 INSERT BUFFER (INSERT) INTO EYE/FACE WASH HEAD NOTING ORIENTATION OF POST IN RELATIONSHIP TO L-SHAPED RIB AS SHOWN ON DETAIL B.
- 5 REASSEMBLE EYE/FACE WASH HEAD, MAKING SURE THAT ALIGNMENT GROOVE ON EYE/FACE WASH HEAD LINES UP WITH ALIGNMENT TAB ON BASE AND O-RING IS SEATED IN O-RING GROOVE.
- 6 REINSTALL SCREWS (QTY. 4) INTO THE EYE/FACE WASH ASSEMBLY. TIGHTEN SNUG TO ENSURE A WATER-TIGHT SEAL.
- 7 REASSEMBLE SP65SS EYE/FACE WASH ASSEMBLY ONTO ADAPTER. ORIENT TAB TOWARDS THE BACK (AWAY FROM USER). DO NOT OVER-TIGHTEN.
- 8 PLACE DUST COVER OVER EYE/FACE WASH.

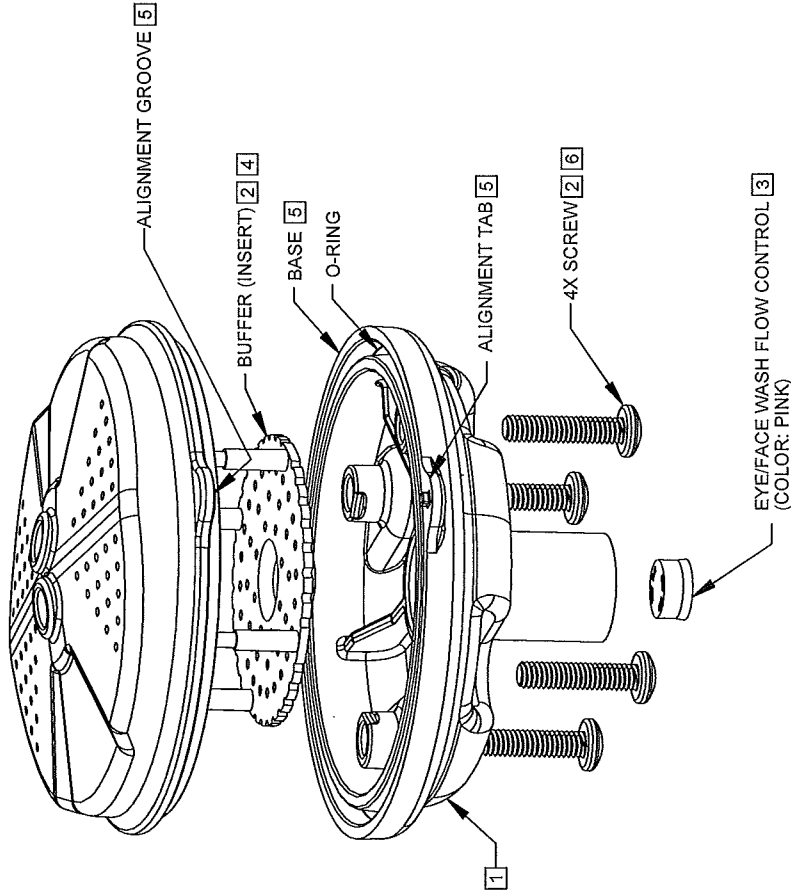


FLOW CONTROL SHOWN IN PLACE
NOTE: PRESS FLOW CONTROL IN
UNTIL IT BOTTOMS OUT

3 DETAIL A

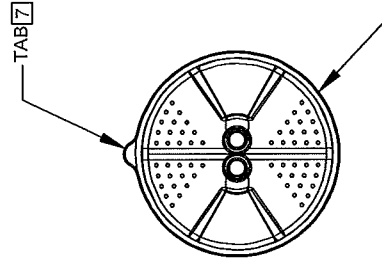


EYE/FACE WASH
SHOWN WITHOUT
DUST COVER 8

NOTE ORIENTATION OF POSTS IN
RELATIONSHIP TO L-SHAPED RIB.
ALL 4 POSTS MUST BE INSIDE OF
RIBS (AS SHOWN).

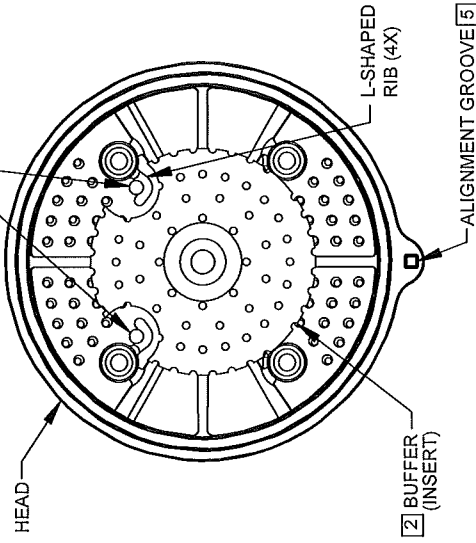

4 DETAIL B

 SEE SHEET 1 OF 2
FOR INSTALLATION/
RETROFIT STEPS



1455 KLEPPE LANE
SPARKS, NEVADA 89431
(775) 359-4712 FAX (775) 359-7424
E-MAIL: HAWS@HAWS.CO.COM
WEBSITE: WWW.HAWS.CO.COM

MODEL(S)

SP65SS

AXION EYE/FACE WASH

ECN NO. REVISED PER BY:	4359	ECN: 4359	HLM
DRAWN:	IR	DATE:	2/10/10
APPROVED:		DATE:	2/10/10
PART NUMBER	0002077593	DRAWING NO.	15972A00
REV	3	SIZE	A
		SHEET	2 OF 2