

Leather Protector Gloves LPG 13

The NOVAX[®] Leather Protector Gloves provides an extra layer of safety for rubber insulating gloves. They are to be used only for mechanical protection against abrasions, cuts, tears and punctures for the insulating gloves. The Leather Protectors should always be worn over the Rubber Insulating Gloves when live working.

| | |
|--------------------------|--|
| Standard | EN 420, EN 388 |
| Rating | 2121X |
| Material | Leather and Nylon |
| Leather Type | Goatskin grain on back and palm Cow split leather on cuff |
| Colour | Grey |
| Thickness | 0.80mm (Palm & Back) 1.20mm (Cuff) |
| Size | 9 – 12 |
| Length | 330mm (13") |
| Draw Strap | Adjustable strap |
| Weight (g) / pair | Approx. 240 – 264 (<i>depending on size</i>) |
| Packing | 1 pair in a polybag, 25 polybags in an export carton |



| Sizes | 9 | 10 | 11 | 12 |
|--------------------------------|-------|-------|-------|-------|
| Palm Circumference Measurement | 280mm | 300mm | 310mm | 320mm |

Recommended use:

- With NOVAX[®] Class 3 – 4 rubber insulating gloves.

Which Glove Size Is Right For Me?

NOVAX[®] leather protector gloves are unique where it will fit the same size of NOVAX[®] rubber insulating used.

Example: If a Class 4, Size 10 rubber insulating gloves is being used, the right leather protector to be used is Size 10.

Warning: The leather protectors are to be used only for mechanical protection for the rubber insulating gloves and shall not be used for electrical protection.

Any enquiries, please reach out to us at sales@novax-intl.com or visit our website at www.novax-intl.com