


## NOTES: FOOT TREADLE ASSEMBLY

- 1 HOOK SPRING THROUGH SLOTTED OPENING OF TREADLE FROM TOP AND CRIMP SECURING IT TO THE TREADLE. INSERT BOLT PROVIDED THROUGH HOLE IN FLOOR FLANGE.
- 2 DEPENDING ON TYPE OF FLAG STYLE, ATTACH COIL RING USING EITHER VIEW A OR VIEW B THEN TRIM SASH CHAIN TO NECESSARY LENGTH IN ORDER TO PROVIDE NORMAL OPERATION. CRIMP END OF SPRING TO SASH CHAIN.

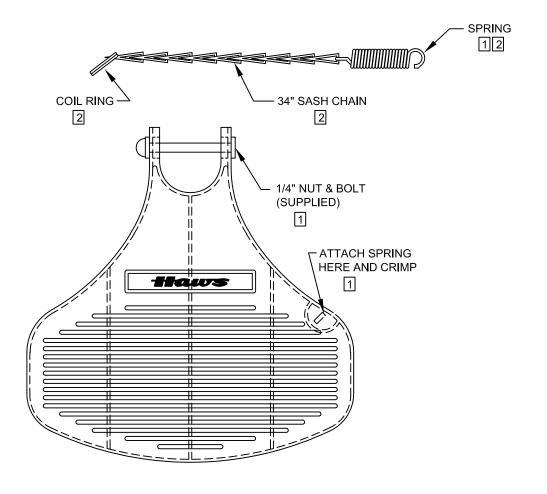

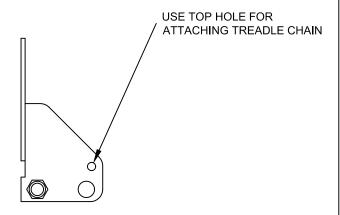

## STYLE A

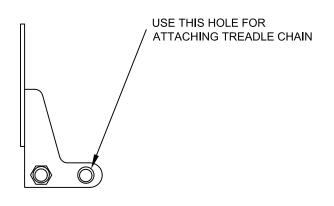

STYLE B

