



MATERIAL

- Light weight breathable added layers of protection
- Outer fabric: Fire retardant fabric - Nomex® Comfort
- 93% Nomex, 5% Kavler, and 2% Antistatic (P140)
- Finish: Wicking
- Inner fabric: 100% Cotton – Light weight

DESIGNED TO


- Discourage touching of nose and mouth
- Decrease the spread of wearer's airborne particles from coughing or sneezing
- Reduce droplets and particles inhaled by the wearer

FR FACE MASK

FR FACE MASK

CONSTRUCTION

- Elastic ear loops for close fit
- Comfortable
- Soft
- Reusable
- Washable
- Easy to wear and take off
- One size fits most

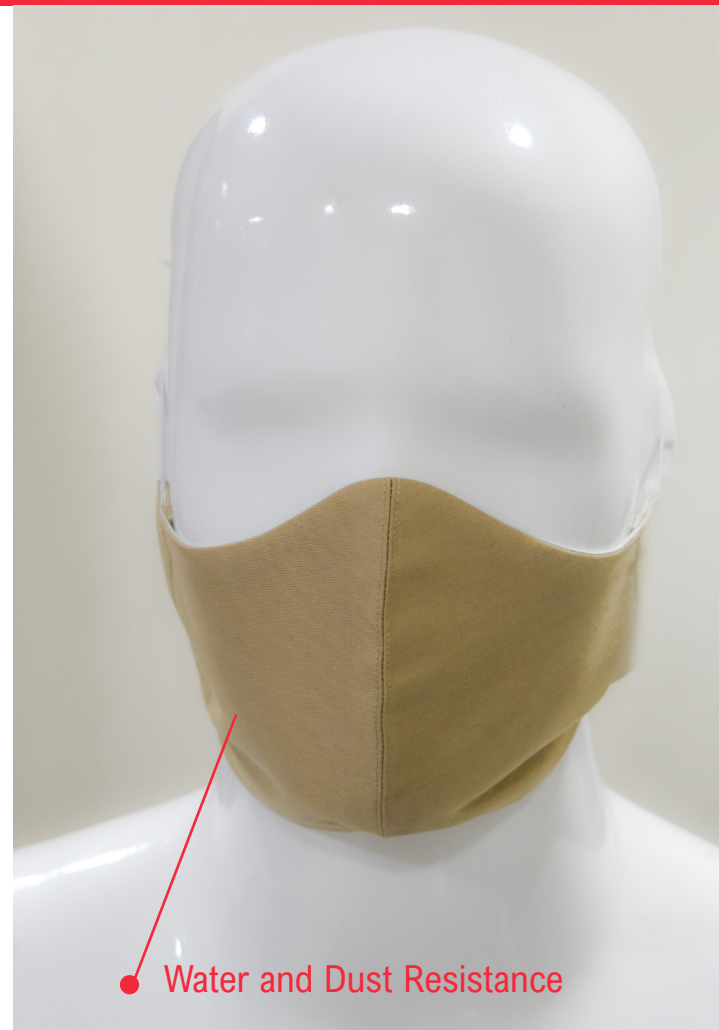

HOW TO WEAR

- Wear over N95 mask to extend usage of N95 mask
- Wear alone for added layer of protection

CARE AND USE

- Wash/sanitize your hands before donning.
- Place CLEAN mask over nose and mouth.
- The top of the mask should rest on the bridge of your nose.
- The bottom of the mask should cover your chin, resting underneath your chin.
- When removing, tilt your head forward.
- Let the mask fall forward, away from your face.
- Sanitize your hands immediately after removing the mask.

HOW TO WASH AND DRY

- FR Face Masks are reusable.
- Wash your mask before first use.
- It is important to wash between each wear.
- Wash ALONE using standard home laundry or hand wash.
- Regular detergent (no bleach, no fabric softeners, no alcohol, no chemical sanitizers).
- Warm or Cold water (not to exceed 105°F).
- Line dry in cool shaded location.
- Dry thoroughly – do NOT wear a wet FR Face Mask!